

## University Lutheran Church of Hope

### Dishwasher Instructions

#### To Turn On:

- ⇒ Close the drain level. (To the right inside the machine is a small metal curved level – push it down to close the drain)
- ⇒ Close the doors to the dishwasher.
- ⇒ Push the two switches up to the “on” position on the two gray boxes to the left (as you face the dishwasher)
- ⇒ Push the black rocker switch up to the “on” position – This is located on the lower right control panel.
- ⇒ You should hear the dishwasher begin to fill. It takes it about 20 minutes to fully heat up. Temperature should read 160 so that the dishes are sanitized.

#### To Turn Off:

- ⇒ Do the above directions in the reverse order.
- ⇒ Please leave the doors to the dishwasher up.
- ⇒ When fully drained, please check the inside drain basket. Remove and rinse out if there are food particles in it.
- ⇒ Take the rubber squeegee and scrape the water off the stainless steel counters on both sides into the dishwasher unit.

#### Other Items To Note:

- ⇒ Check the soap dispenser to the left of the machine on the wall. This takes a solid block of soap. If empty, extra blocks can be found in the brown cardboard box on the wire storage rack.